ACTION®

MODEL NO.: ACN-5402

LCD COLOR TV / MONITOR

Instruction Manual

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This symbol is intended to tell the user that parts inside the product present a risk or electric shock to persons.

This symbol is intended to tell the user that important operating and servicing instructions are included in the Operating Instruction.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

A. Bill of Contents

1. Main unit
2. AC Adapter, Car Adapter, ANT Adapter
3. Instruction manual
4. Gift Box

B. Features

1. Flip-up LCD color screen
2. TV Tuner with VHF/UHF switchable
3. AV input for external AV source
4. Headphone jack
5. Dual built-in Speaker
6. Telescopic Antenna or External Antenna input
7. Volume/brightness adjustable.
8. 12V to 7.5V DC Car Adapter, AC Adapter, and Battery operation.

C. Do not ...

1. Submerge or spill water or other liquids on the unit.
2. Drop the unit.
3. Clean the unit with solvents or oil based cleaners (only use slightly damp cloth).
4. Leave the unit running unattended.
5. Store the unit in direct sunlight or extreme cold/hot temperatures, as this may damage the electronic components.
6. Open the cabinet of unit. Maintenance or servicing must be done by trained technician.

D. Standing on a resting surface

Place the unit onto a resting surface, and flip up the Monitor for a proper viewing angle.

E. Controls/Jacks

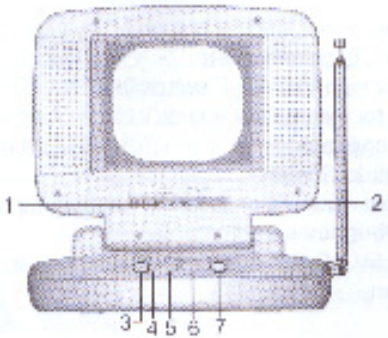

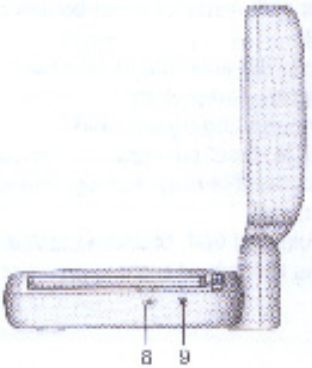

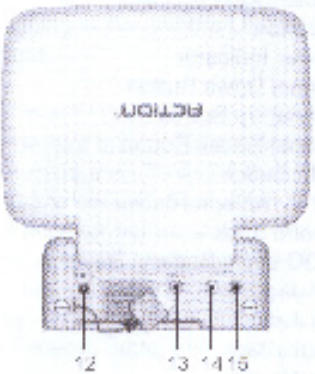
12
13
14
15

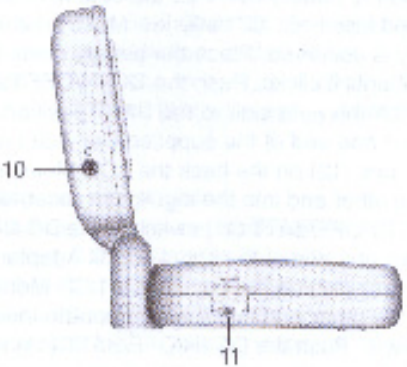
10
11

1. Volume Control
2. Brightness Control
3. Power Button
4. LED Power Indicator
5. TV Channel Down Button
6. TV Channel Up Button
7. TV Channel Recall Button
8. VHF/UHF Switch
9. External TV Antenna Jack
10. Headphone Jack
11. Power (DC In/Off/Battery) Switch
12. DC 7.5V Jack
13. Video In Jack
14. Audio In (L) Jack
15. Audio In (R) Jack

F. Power supply

1. Remove the battery cover on the bottom of the Tuner Box, and install six "C" batteries. Make sure the proper polarity is observed. Place the battery cover back and press it until it clicks. Push the DC IN/OFF/BATT (11) switch on the right side to the BATT position.
2. Or insert one end of the supplied Car Adapter into the DC IN jack (12) on the back the LCD Monitor, and in sert the other end into the cig. lighter receptacle. Push the DC IN/OFF/BATT (11) switch to the DC IN position.
3. Or insert one end of the supplied AC Adapter into the DC IN jack (12) on the back of the LCD Monitor, and insert the other end into the appropriate indoor receptacle. Push the DC IN/OFF/BATT (11) switch to the DC IN switch

Note: 1. Always push the DC IN/OFF/BATT (11) switch to the OFF position if you do not intend to use it.
2. After plugging in the unit the LED power indicator (4) will light.

CAUTIONS: Be sure to remove batteries when storing the set for more than 30 days. Leaky batteries can badly damage the unit. Always turn power button to the off position before storing. This will relieve pressure on certain parts in the unit that might deform after long periods of time. Be sure to dispose of leaky, weak or dead batteries properly according to Federal, State, and Local regulations.

G. Utilize Antenna

1. Extend the telescopic antenna fully out of the right side of the Tuner Box. Optimize the image and sound by adjusting its extension, and direction.
2. Or for better reception, connect the external antenna to the EXT ANT jack (9) on the right side of the Tuner Box.

H. Inputting external source

To play the external source such as DVD Player, VCP, VCR or other Game Console, input the source into the AV IN jack (13), (14), (15) on the back with the appropriate AV cable. Be sure to match the color-coded cable to the appropriate jacks: Yellow (video) to Yellow, White (left) to White, Red (right) to Red.

I. Wired Headphone

There are HEADPHONE jack (10) on the side for user to enjoy at the same time.

J. Operation

1. Press down the POWER button (3) to turn on the unit, with the LED indicator (4) of power turning lighter, while press down this button again to turn off the Monitor.

2. Switch the VHF/UHF (8) for your desired TV band.
3. Press the RECALL (7), to display the bar for tuning.
4. Press the TV CHANNEL UP (6) or DOWN (5) button to search TV channels, the bar will keep shifting on the screen until stop on the active TV channel. Go on to press the TV CHANNEL UP (6) or DOWN (5) button to search other TV channels.
5. Turn right the VOLUME control (1) to raise the volume, while turn left this VOLUME to lower the volume.
6. Turn right the BRIGHTNESS control (2) to increase the brightness of picture, while turn left the BRIGHTNESS thumbwheel to decrease the brightness of picture.

K. Specification

1. System: NTSC
2. 4" TFT LCD Color TV/Monitor With 3.2" Viewing Area
3. Antenna: Telescopic Antenna or External Antenna
4. Channels: 2-6 (VHF low), 7-13(VHF high), 14-69 (UHF)
5. Power supply: DC 7.5 V
6. Power Consumption: 6.75 W
7. Operating temperature: 5 ~ 40 ℃
8. Storage temperature: -20 ~ 60 ℃
9. Operating humidity: 10 ~ 75 %
10. Dimensions(L x W x H): 270 x 190 x 80 mm
11. Weight: 0.9 kg

ACTION

LIMITED WARRANTY

AMERICA ACTION INC. Warrants this product against defects in material or workmanship as follows:

For a period of 90 days from the date of purchase. ACTION will pay the labor charges to repair the defective product. After this 90 day period, you must pay for all labor charges.

In addition, ACTION will supply, at no charge, new or rebuilt replacements for defective parts for a period of 1 year from the original daye of purchase.

LABOR AND PARTS

To obtain warranty services during the initial 90 day period, you must take the product, or deliver the product freight prepaid, to ACTION service center.

PARTS ONLY

During the remainder of the warranty period, any defective part will be replaced if it is taken, or delivered freight prepaid, to ACTION serivce center. Labor for repair is available at your expense.

This warranty dose not cover customer instruction, installation, set up adjustments, and signal reception problems.

This warranty does not cover cosmetic damage, and damage due to acts of accident, misuse, abuse or negligence of the product, including the antenna. This warranty is valid only in the United States of America/ Canada.

Proof of purchase in the from of a bill of sales or receipted ninvoice which is evidence that the unit is within the warranty period must be presented to obtain warranty service.

This warranty is valid only if the serial number appears on the product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ACTION SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

AMERICA ACTION INC.
SERVICE CENTER
100 EXCHANGE PLACE
POMONA, CA. 91768-4307
TEL: (909) 869-6600
FAX: (909) 869-5545
Website: www. actiontvusa. com